

RXTRACKING

ULTRA-LONG BATTERY LIFE TRACKER TAG

Instruction Booklet



Want Cutting Edge 4G Vehicle Tracking?

If you want to take your tracking to the next level visit our website for the latest prices and models. Global Tracking, Geofence Alerts, 3 Month Tracking History, Vehicle Immobilise and More...

10% Discount Code: RXTrack10




www.rxtracking.co.uk

Pairing Instructions - English

Place the tracker in close proximity to the device you will be pairing it with.

- Insert 2 x AA Batteries into the tracker.
- Open the 'Find My' App on your Apple iOS device.
- Click: 'Items' then '+' then 'Other Item'

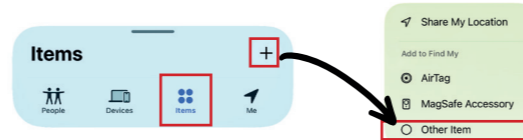

While your device shows 'Searching Items' click and hold the Tag 'Reset' button for 2 seconds until you hear a beep.

Your device should show the RX Tracking Tag module 'siindoo Tag', click connect.

Follow the instructions for Naming and Icon / Emoji. Setup is now complete, enjoy your tracking!

Safety & Handling Information

The RX Tracking Tag is designed for everyday use and safe operation when handled correctly.

Please read and follow the guidance below.

- Insert batteries with the correct polarity as indicated. Use only high-quality AA batteries. Do not mix old and new batteries or different battery types.
- Remove batteries if the device will not be used for an extended period.
- Do not recharge non-rechargeable batteries.
- If batteries leak, remove them immediately and clean the compartment before reuse.
- Keep the RX Tracking Tag and batteries out of reach of children.
- This product is not a toy.
- Do not disassemble, crush, puncture, or modify the device.
- Do not expose the product to fire, extreme heat, or prolonged moisture.
- Avoid installing the tag where it may interfere with vehicle controls, safety systems, or moving parts.

Reset Button & Beep Guide

Function	Operation	Beep
Power On	Press and hold the button (about 2 seconds) until you hear a single beep. Release to enter pairing mode. There is a 2-minute timeout.	B
Disable	Press and hold the button (about 7 seconds) and release it after hearing the continuous beep tone.	B,BB,BBB
Factory Reset	Press and hold the button (about 7 seconds) until you hear a series of beeps (b,b,b), then continue holding for 3 more seconds until you hear a long beep. This restores factory settings and enters pairing mode.	B,B,BBB
Locate Sound	Click Play Sound on the Find App, and the device will emit 12 consecutive beeps, lasting 9 seconds.	B x 12
Remove Device	Place the Tag near your device and in the Find My App click Remove item. The device will emit a beeping tone when removed.	BBB
Pairing Success	Place the device next to your phone, complete the Pairing Instructions outlined. Tag will beep twice when successfully paired.	BB
Pairing Timeout	If the device is not paired within 2 minutes after power on, it will automatically exit pairing broadcast.	


Care To Share Your Experience?
Please share your experience with the RX Tracker Tag by leaving a review on Amazon.



Instructions d'appairage – Français

Placez le traceur à proximité de l'appareil avec lequel vous allez l'appairer.

- Insérez 2 piles AA dans le traceur.
- Ouvrez l'application 'Find My' sur votre appareil Apple iOS.
- Appuyez sur Items, puis +, puis Other Item

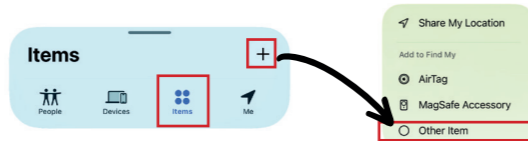

Lorsque l'écran affiche Searching Items, appuyez et maintenez le bouton Reset du tag pendant 2 secondes jusqu'au bip.


Le module RX Tracking Tag – "siindoo Tag" apparaît, appuyez sur Connect.

Suivez les instructions pour le nom et l'icône / emoji. Configuration terminée, profitez de votre suivi !

Instrucciones de emparejamiento – Español

Coloque el rastreador cerca del dispositivo con el que va a emparejarlo.

- Inserte 2 pilas AA en el rastreador.
- Abra la app 'Find My' en su dispositivo Apple iOS.
- Pulse Items, luego +, luego Other Item.

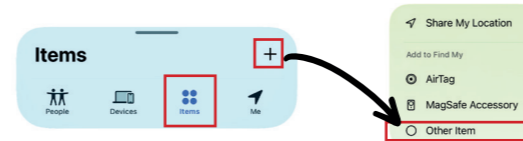

Mientras aparece Searching Items, mantenga pulsado el botón Reset durante 2 segundos hasta oír un pitido.


Aparecerá RX Tracking Tag – "siindoo Tag", pulse Connect.

Siga las instrucciones para el nombre y el icono / emoji. Configuración completada, disfrute del seguimiento.

Kopplungsanleitung – Deutsch

Place the tracker in close proximity to the device you will be pairing it with.

- Legen Sie 2 AA-Batterien in den Tracker ein.
- Öffnen Sie die 'Find My' App auf Ihrem Apple iOS-Gerät.
- Tippen Sie auf Items, dann +, dann Other Item.

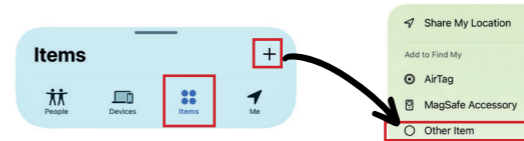

Während Searching Items angezeigt wird, halten Sie die Reset-Taste 2 Sekunden gedrückt, bis ein Signalton ertönt.


Das Modul RX Tracking Tag – „siindoo Tag“ wird angezeigt, tippen Sie auf Connect.

Folgen Sie den Anweisungen für Name und Symbol / Emoji. Einrichtung abgeschlossen – viel Spaß beim Tracking!

Istruzioni di abbinamento – Italiano

Posizionare il tracker vicino al dispositivo con cui verrà abbinato.

- Inserire 2 batterie AA nel tracker.
- Aprire l'app 'Find My' sul dispositivo Apple iOS.
- Toccare Items, poi +, poi Other Item.

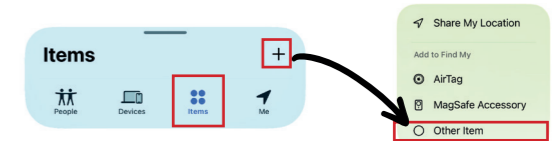

Quando appare Searching Items, tenere premuto il pulsante Reset per 2 secondi finché si sente un beep.

Verrà visualizzato RX Tracking Tag – "siindoo Tag", toccare Connect.

Seguire le istruzioni per nome e icona / emoji. Configurazione completata, buon tracciamento!